

# 'H'


## SLAT 'H' GONDOLA **fixing instructions**

NB : HEAVY WHEN ASSEMBLED, 2 PERSONS ADVISED

**Handle with care. Some parts are sharp. Wear suitable gloves.**

The slatted panels have the 1st groove 50mm down from top.

1. ASSEMBLE UPSIDE DOWN !!
2. FIX END PANELS (B & A)
3. FIX BASE (ITEM C)
4. FIX PLINTH SIDES (ITEM D)
5. TURN OVER & MOVE INTO POSITION.
6. FIX SIDE PANELS (ITEM E)
7. CLIP PLASTIC INSERTS INTO GROOVES INTO PANELS. NB - ensure they are all right way up

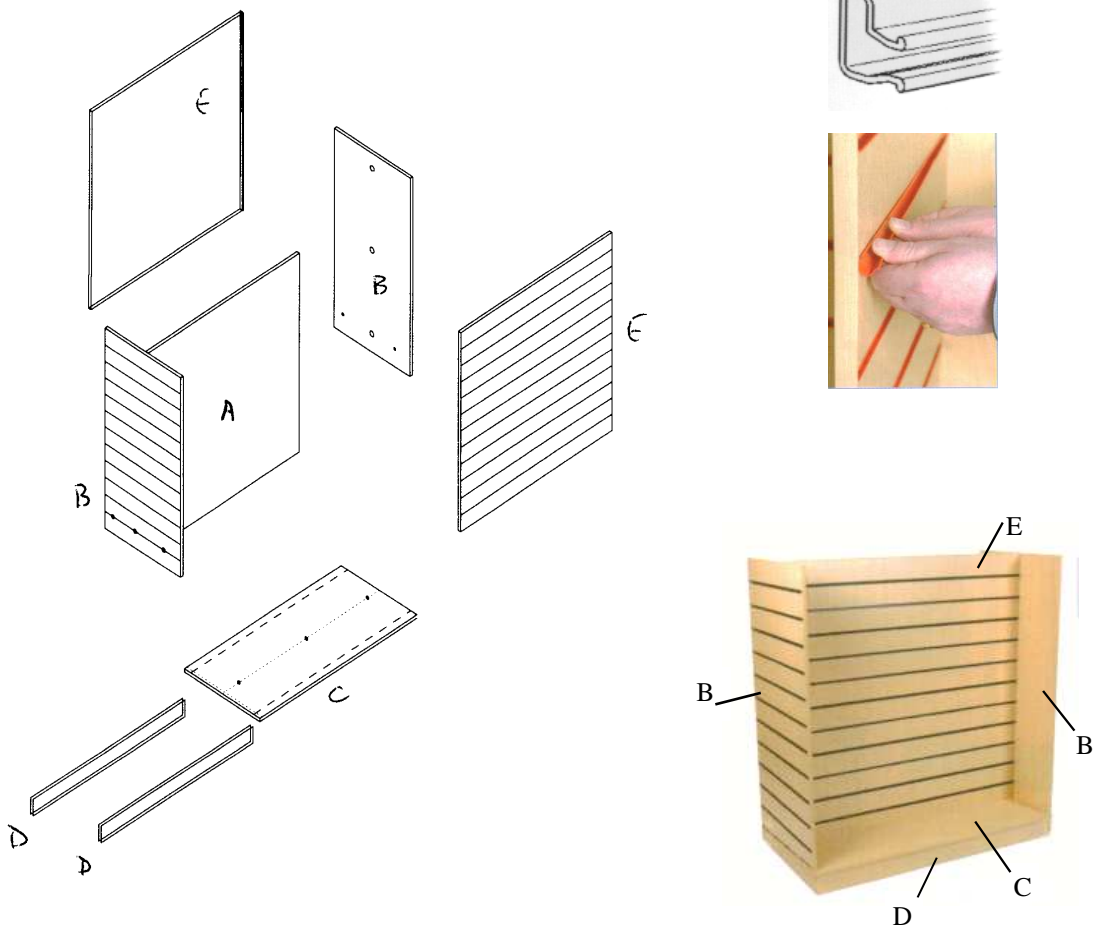

### PARTS LIST -

**A = MID PANEL PLAIN 1140 x 1204mm ( x 1)**

**B = END PANEL GROOVED 1250 x 600 ( x 2)**

**C = BASE PANEL PLAIN 1204 x 600 ( x 1)**

**D = PLINTH PANEL PLAIN 1204 x 90 ( x 2)**

**E = SIDE PANEL GROOVED 1140 x 1204 ( x 2)**

Sizes shown are for 1240mm unit.