





## ASSEMBLY INSTRUCTIONS FOR SLAT TOWER

- If not already fitted, clip inserts into the grooves in the 4 slatted panels, ensuring all are the same way up. The top of the panel is now determined by the insert—see inset sketch.
- Screw the 4 slatted panels together as shown, using 40mm screws & cups. The screws go straight into the edge of the adjacent board, & so on all the way round the tower. **N.B.** Are you sure the panels are all the same way up??
- It is easier to fit the Base panel by turning the tower upside down - I.e. inserts now facing down.
- Carefully line up the base board centrally on the tower, countersunk holes outward. Fix with 40mm screws into edges of tower. Turn back up the right way—inserts now upwards-& locate top panel. This drops on & the blocks keep it located.

Inserts should all be this way up



Top panel  
350 x 350

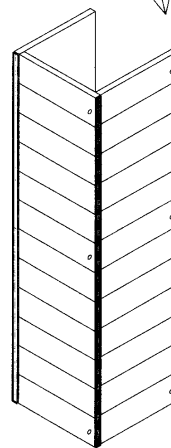


Qty 4 side panels,  
1200 x 300



Chelworth Industrial Estate  
Cricklade Nr Swindon, SN6 6HQ  
Tel 0845 230 1068  
Fax 01793 759375  
E-mail sales@kasshopfitting.co.uk

Sizes refer to small Tower

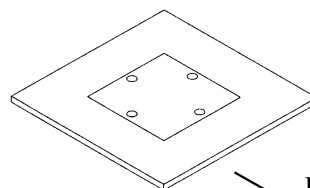

Base panel  
600 x 600