


EXPLODED DIAGRAM FOR THE ASSEMBLY OF CHROME GARMENT STANDS

D101 and D103

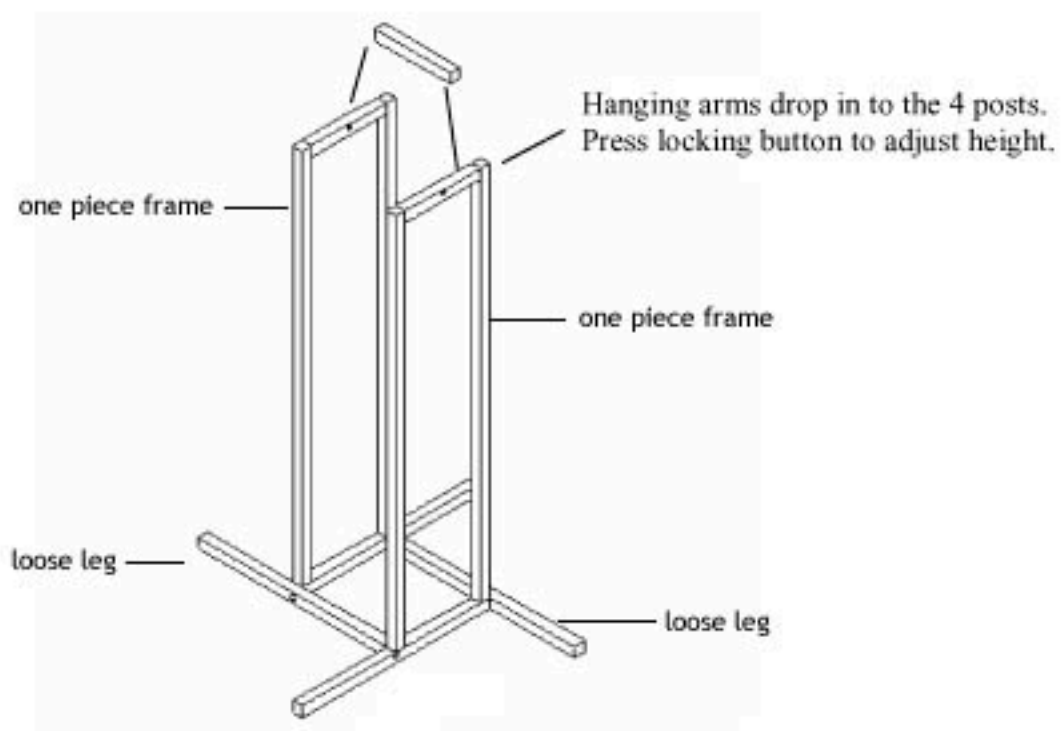

1. Stand the two frames up with legs pointing in opposite directions.
2. Remove the bolts from their captive positions in the short spreader Bar and bolt into position at the top, as shown above.
3. Remove bolts from captive locations on the two loose legs & bolt into positions as above.
4. Push hanging arms into place, de-pressing the locking button to adjust height.